



Repairing LG VX5200 Screen

Tools used in this guide

- [Metal Spudger](#)
- [Phillips #00 Screwdriver](#)
- [Spudger](#)



Step 1 - Screen

- Pry the grey pieces of plastic off the corners of the screen with a spudger.






Step 2


- Unscrew each of the four screws with a Phillips #00 Screwdriver.
- These screws are the same size as the ones from the back casing, but are not the same size as the screw from the antenna.



Step 3



- Close the phone after removing the screws.
- Slide a spudger into the cracks in the top half of the phone's casing.
- Wedge and lever the spudger to remove the casing.
- Apply constant pressure to avoid cracking the plastic casing. This step can take a few minutes.

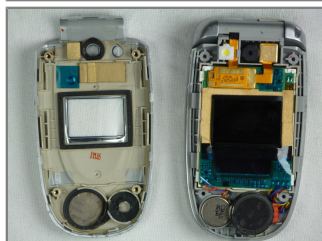

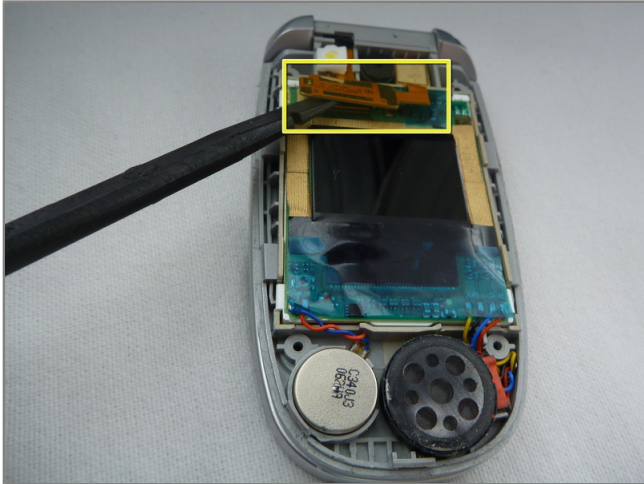

Step 4

- Remove the chipboard from the screen by sliding a plastic spudger under the screen and lifting.
- Use a plastic spudger to avoid short-circuiting the phone's electronics.
- Gently lift the speaker out of the plastic casing using a plastic spudger.
- Remove the small battery adjacent to the speaker with a plastic spudger.

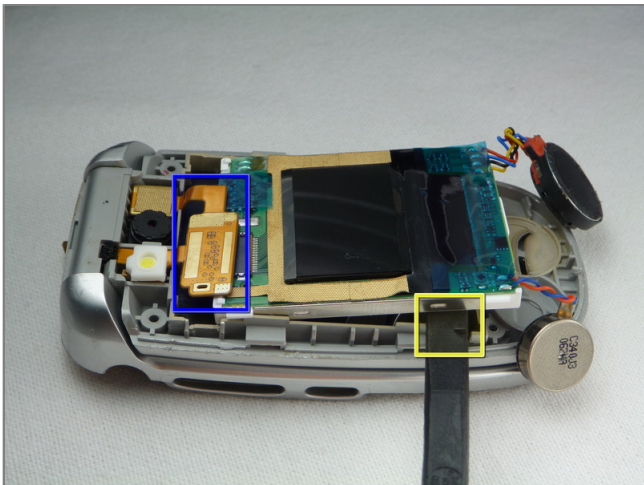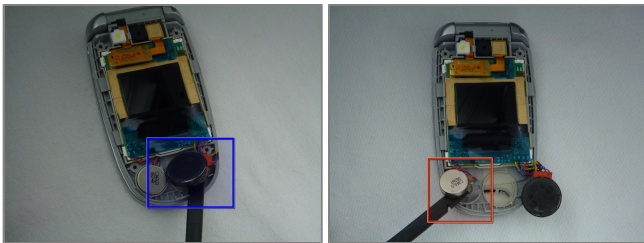

Step 5

- Slide and lever a plastic spudger between the screen and its housing.
- Avoid tearing the wires connecting the screen, the small battery and the speaker.
- Remove the chip connecting the screen to the camera using your fingers.

